



# **Play-Fi Device (**

**Unison**

 
**MartinLogan**

**7CB77B02932D**




**Tue July 12 2022**

### Front Left

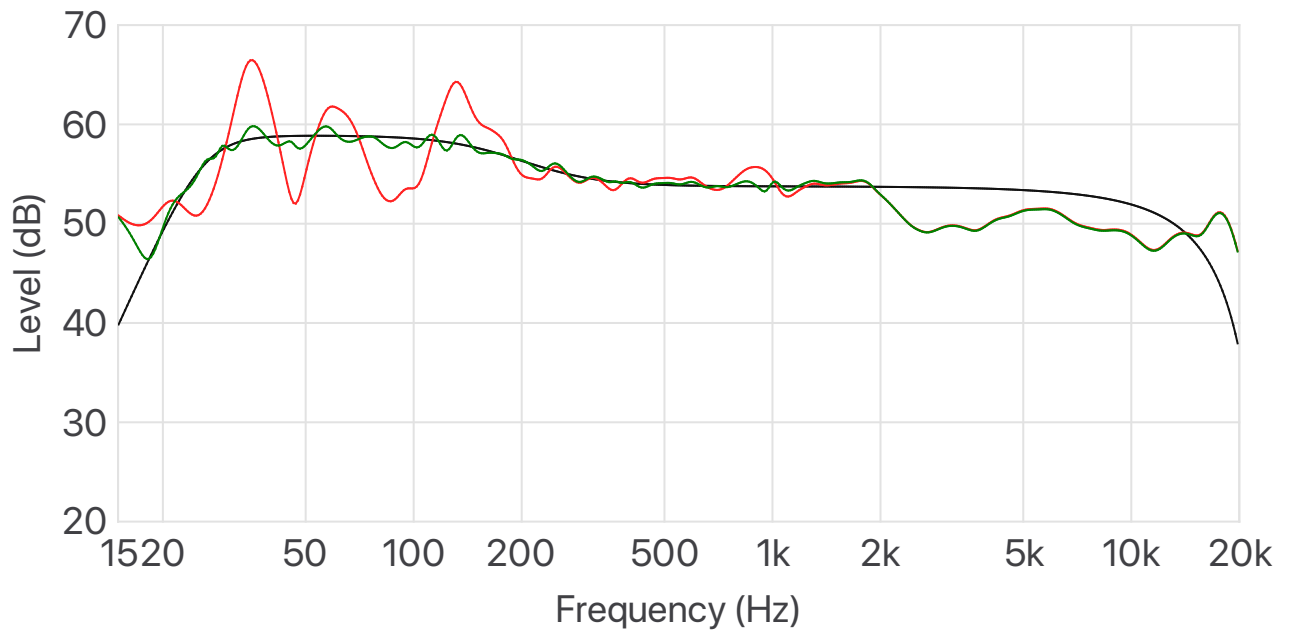

● Target Curve ● Measurement Curve ● Corrected Curve

### Front Right

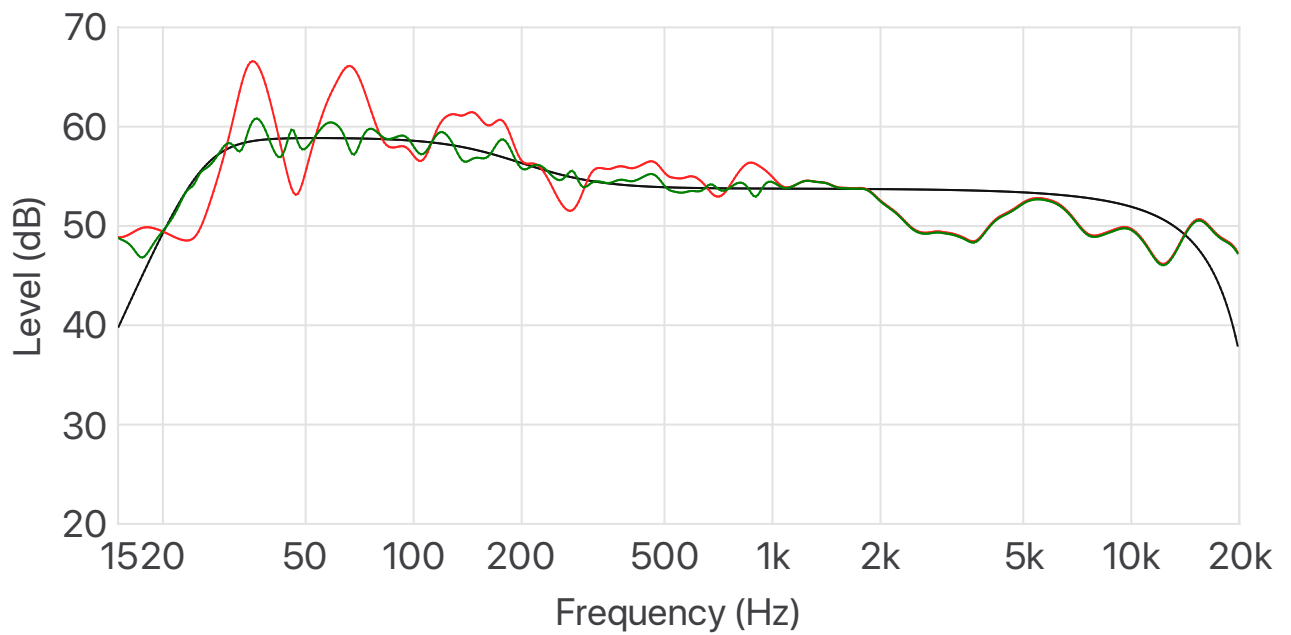 

● Target Curve ● Measurement Curve ● Corrected Curve

## Speaker Profile Settings

Porch uses Measurement A

## List of Speakers Enabled

### Porch:

· Fronts

## Level Settings

### Porch:

System-Wide Level Target: 0 dB

Front Left: 0 dB

Front Right: 0 dB

## Target Settings

### Porch:

Room Gain: 5.125 dB

Room Gain Center Frequency: 200 Hz

Deep Bass Boost: 0 dB

Deep Bass Boost Center Frequency: 50 Hz

Tilt Level: 0 dB

Tilt Start Frequency: 100 Hz

### FRONTS

Subwoofer Crossover Frequency (or Low-Frequency Extension): 26 Hz

Send Bass to Sub (or Low-Frequency Extension Slope): 4th

High-Frequency Roll Off: 1.07

Maximum Correction Frequency: 1400 Hz