

PureAudio

**Configuring Foobar2000 For
DSD and MQA Playback
User Manual V 1.0**

1. Download foobar2000 from the official website

<http://www.foobar2000.org/download>

2. Download the ASIO output plug-in for Foobar2000

http://www.foobar2000.org/components/view/foo_out_asio

This is necessary to ensure the app runs bit - accurate. It seems arcane but Windows and Mac try to do 'smart things' with audio and it is the bane of everyone trying to do accurate or 'audiophile' audio.

3. Download the Binary Comparator plug-in for Foobar2000

http://www.foobar2000.org/components/view/foo_bitcompare


4. Download the foo_input_sacd-0.9.4.zip plug-in for Foobar2000

https://sourceforge.net/projects/sacddecoder/files/foo_input_sacd/files/


5. Download the ASIOProxyInstall-0.9.4.zip plug-in for Foobar2000

https://sourceforge.net/projects/sacddecoder/files/foo_dsd_asio/


6. Install Foobar2000

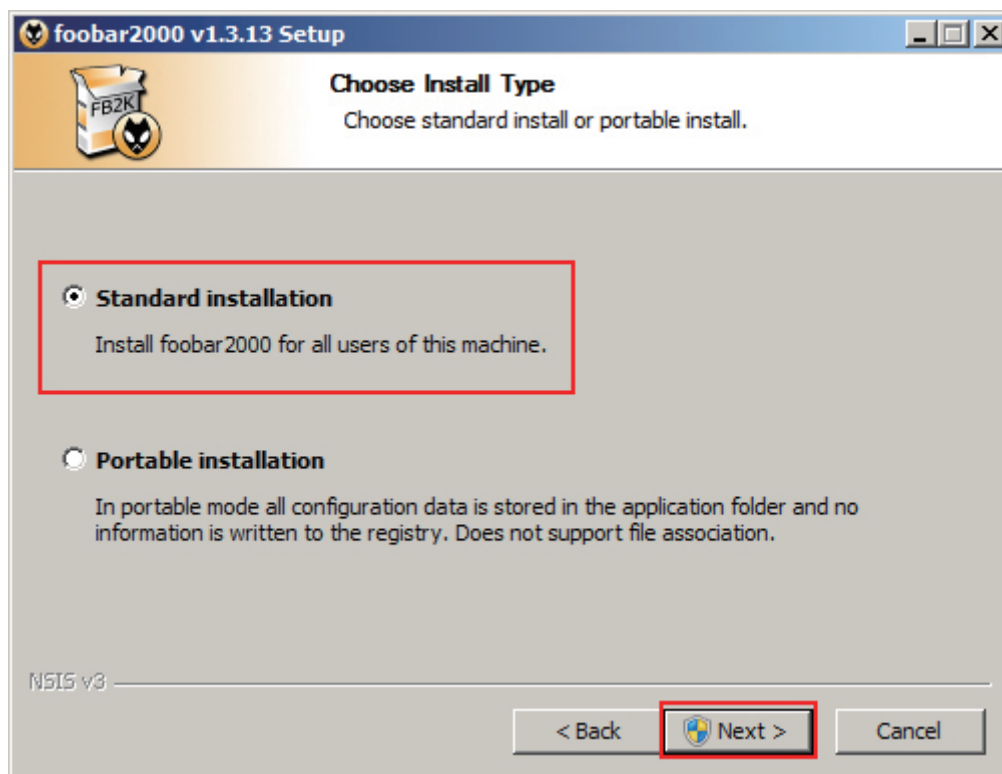


7. Manually install ASIO output plug-in

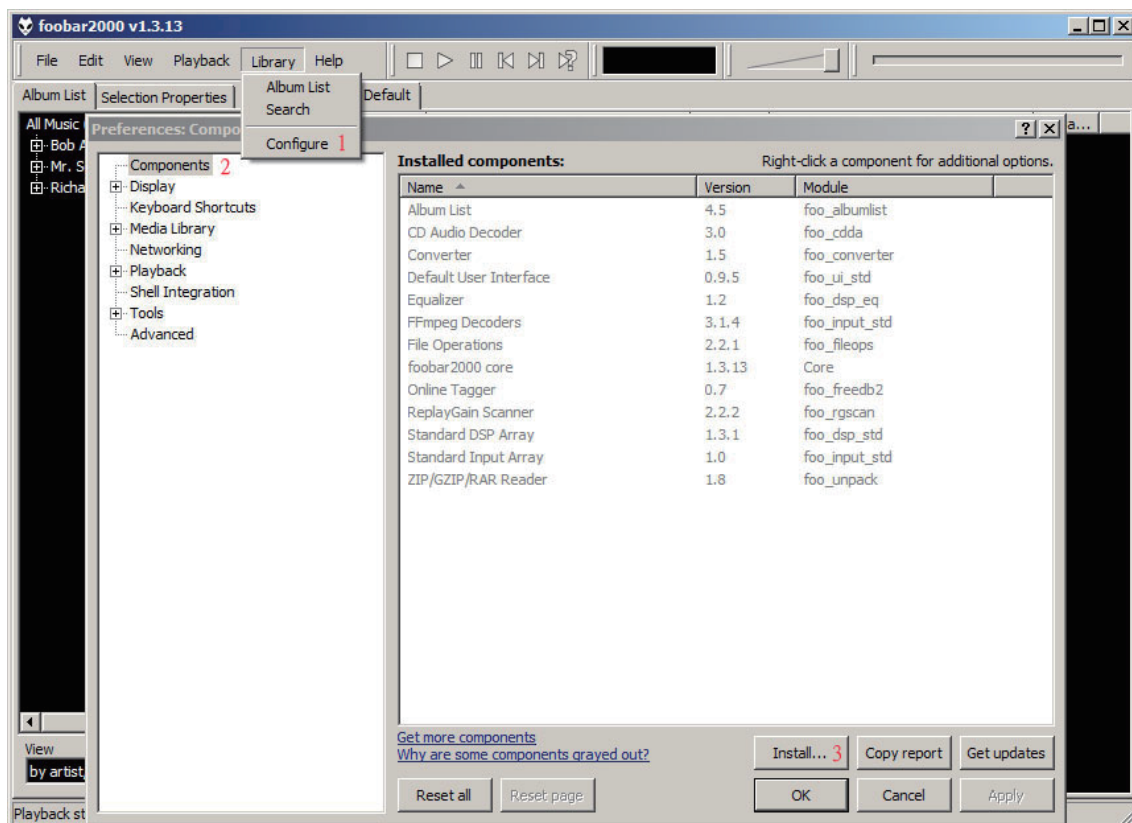


8. Select foo_out_asio

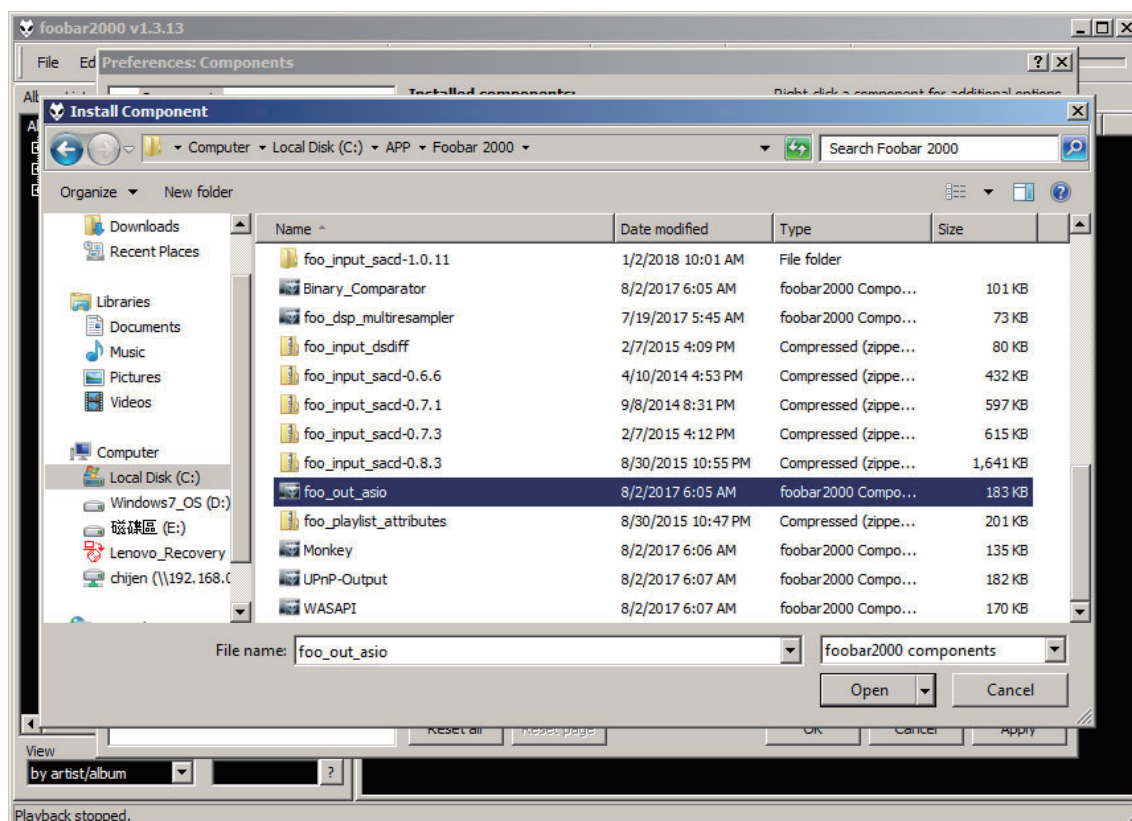


9. Click Apply

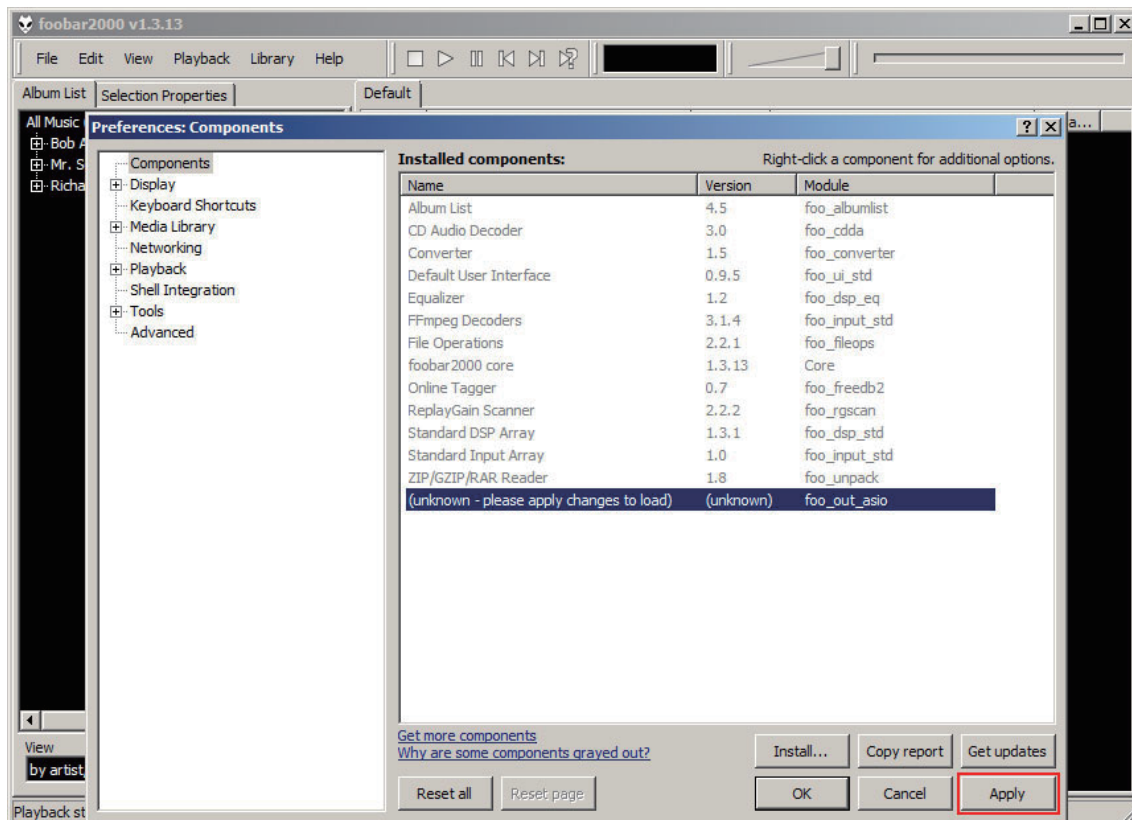


10. Install ASIOProxyInstall-0.9.4

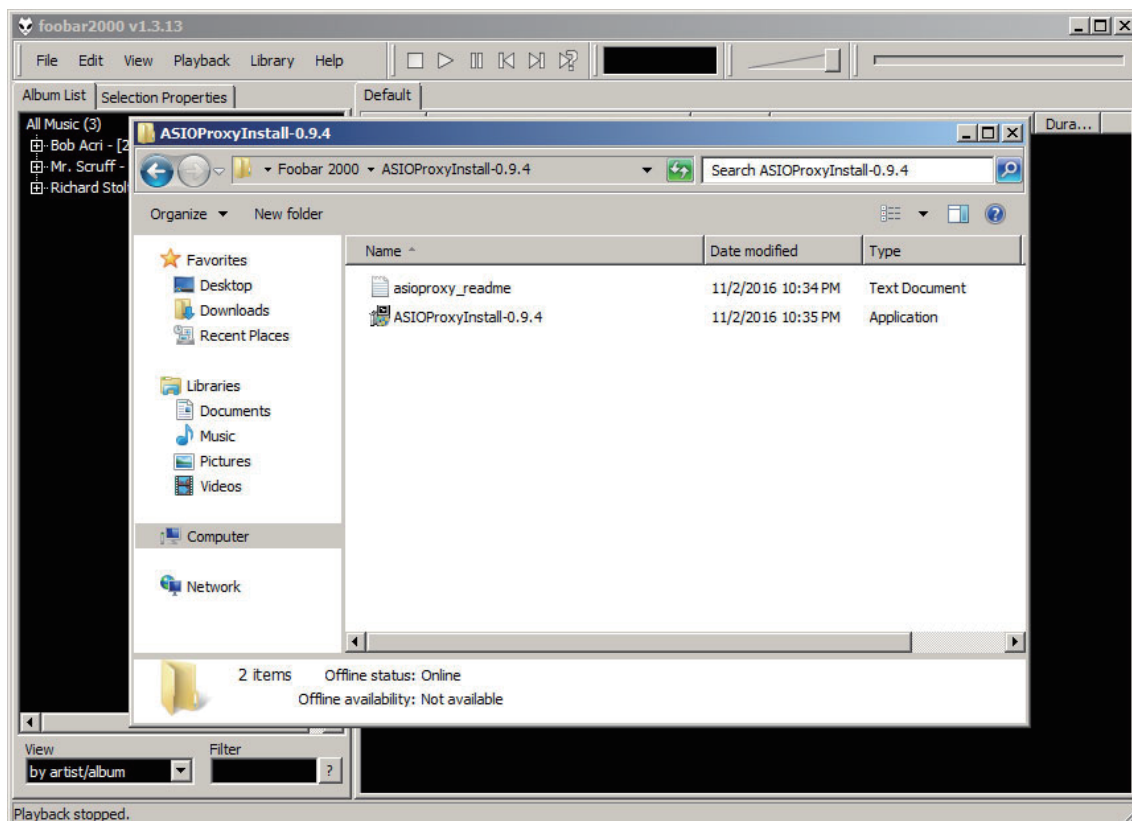


11. Install foo_input_sacd

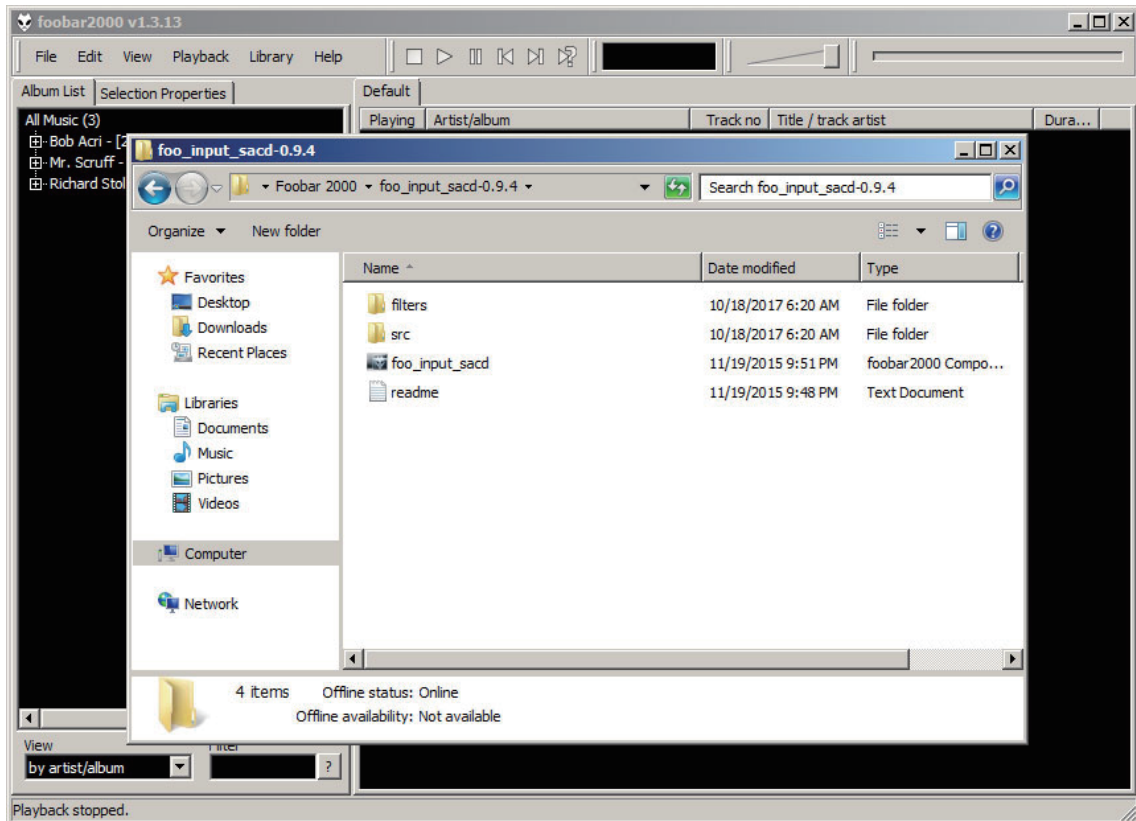


12. Click Yes

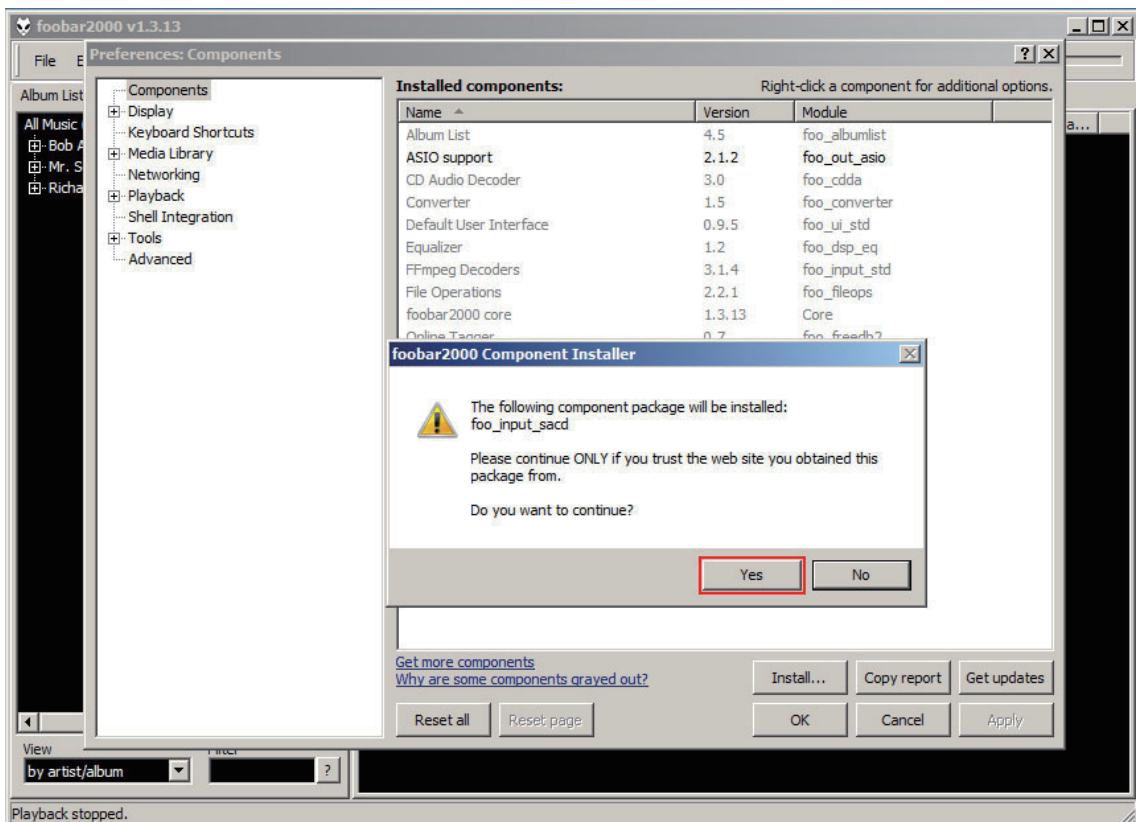


13. Click Apply

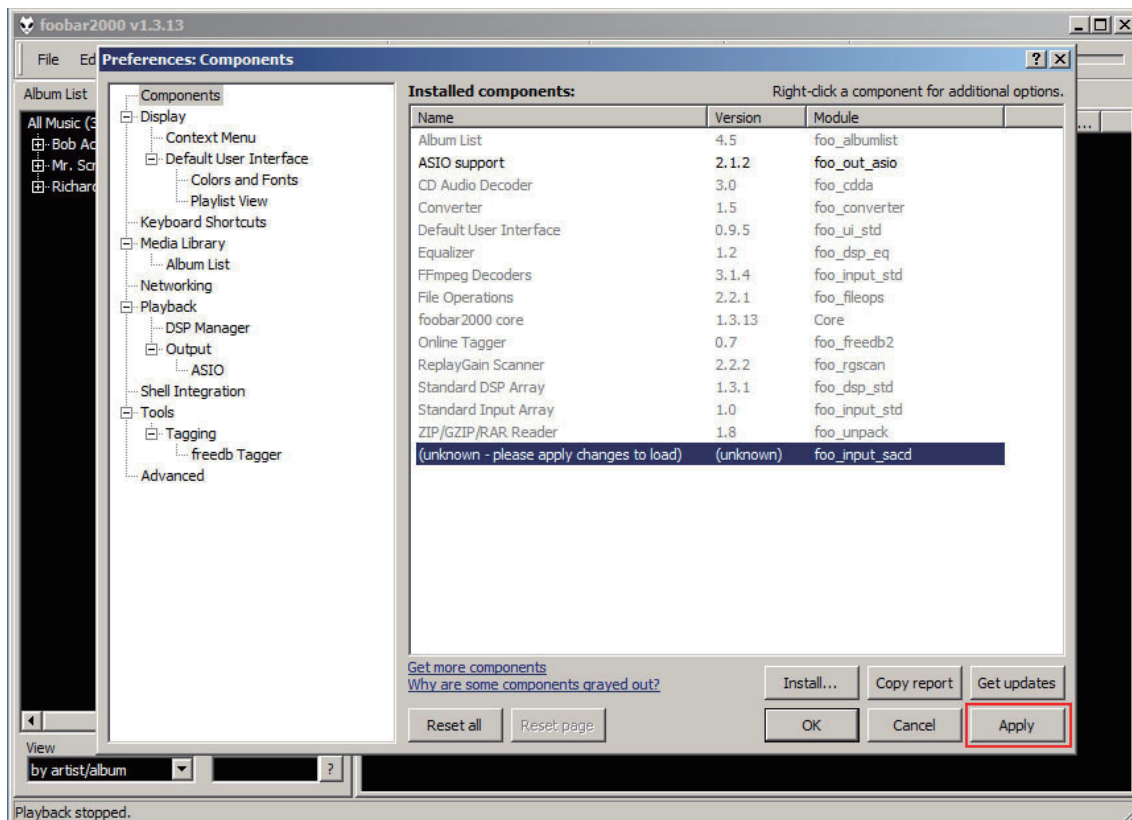


14. Install Binary_Comparator

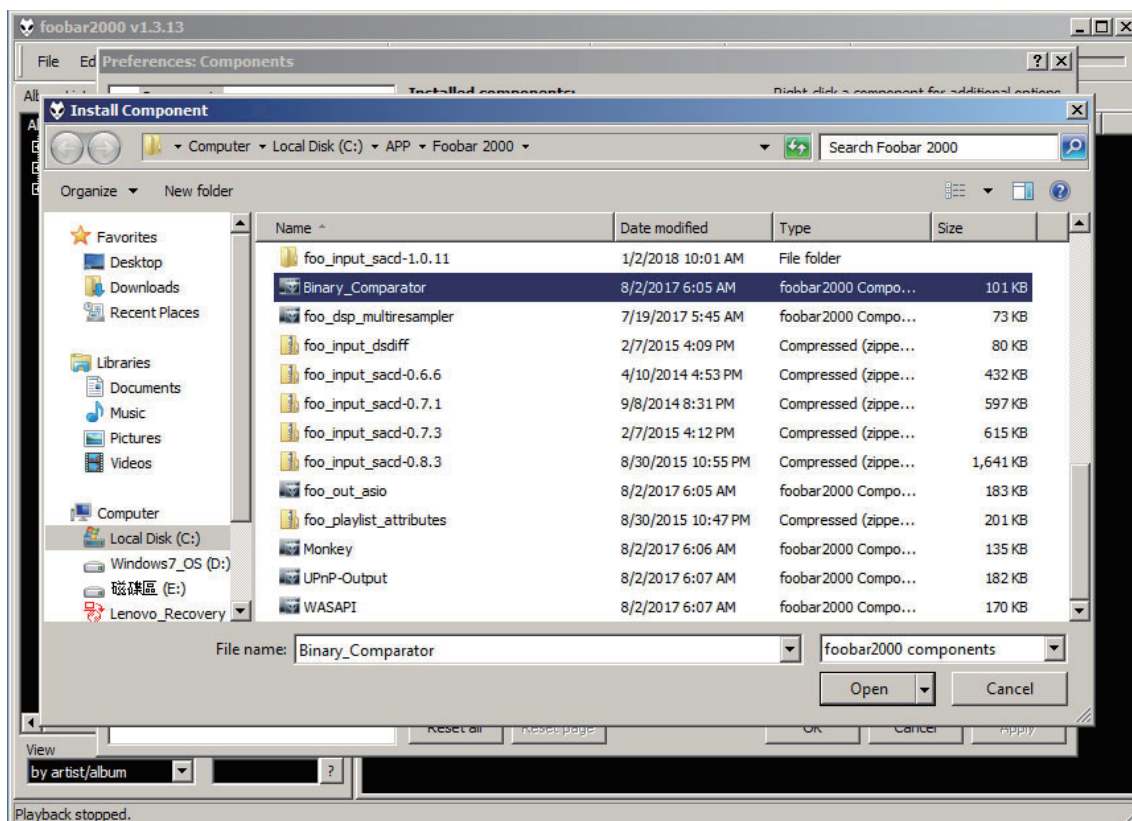


15. Click Apply

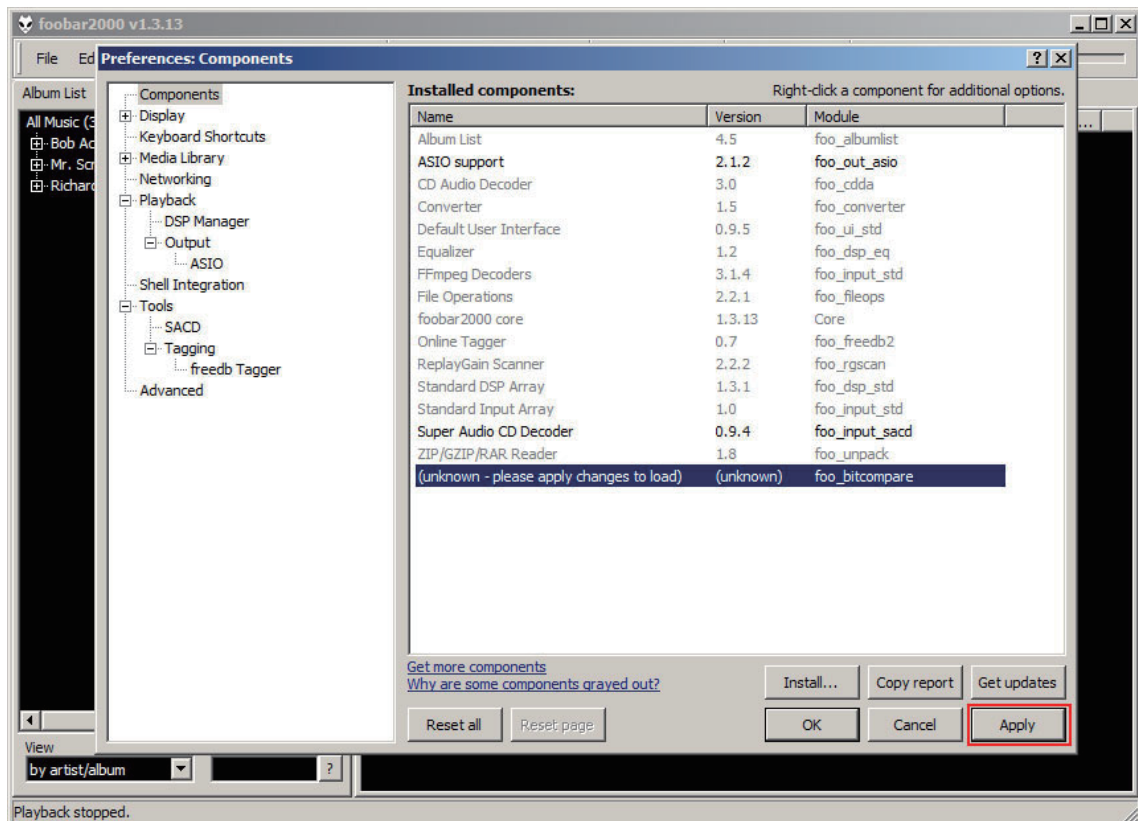


16. The Playback tab should look like this, set ReplayGain to none / none:

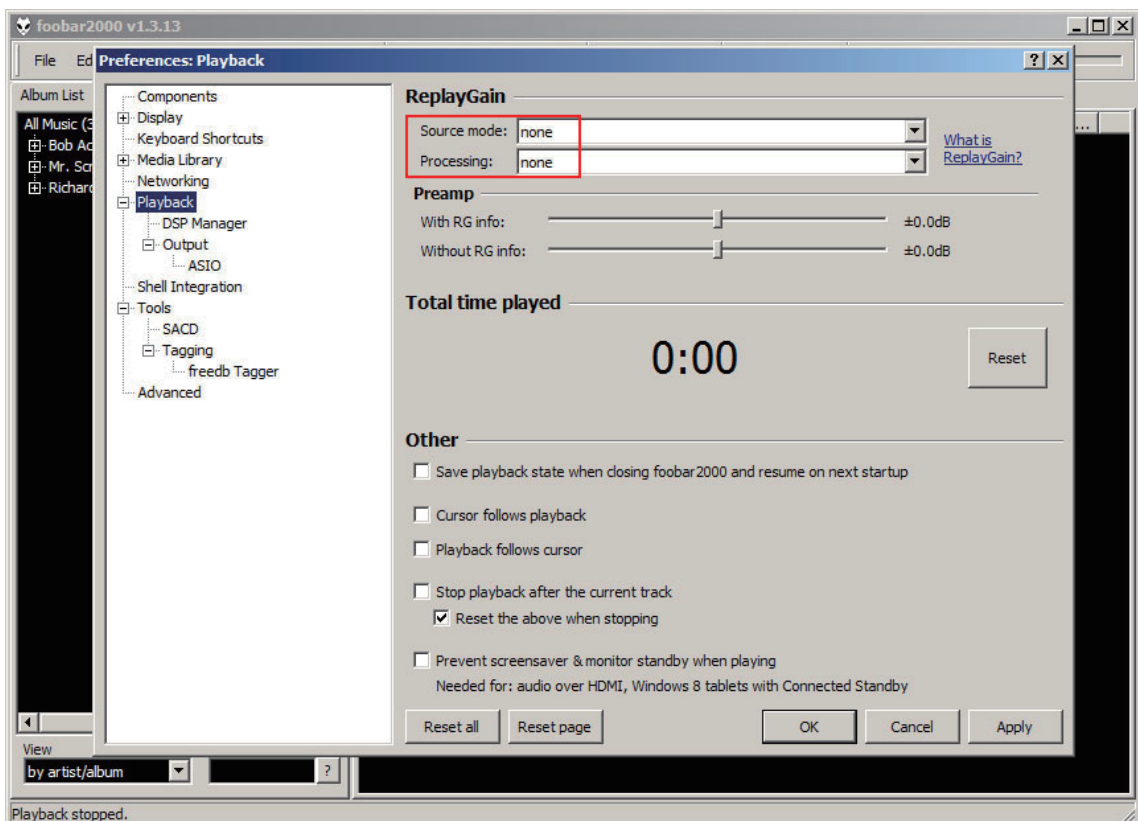


17. The column headers for sample-rate and bitrate are not standard, so key them in as shown in File/Preferences: Playlist View

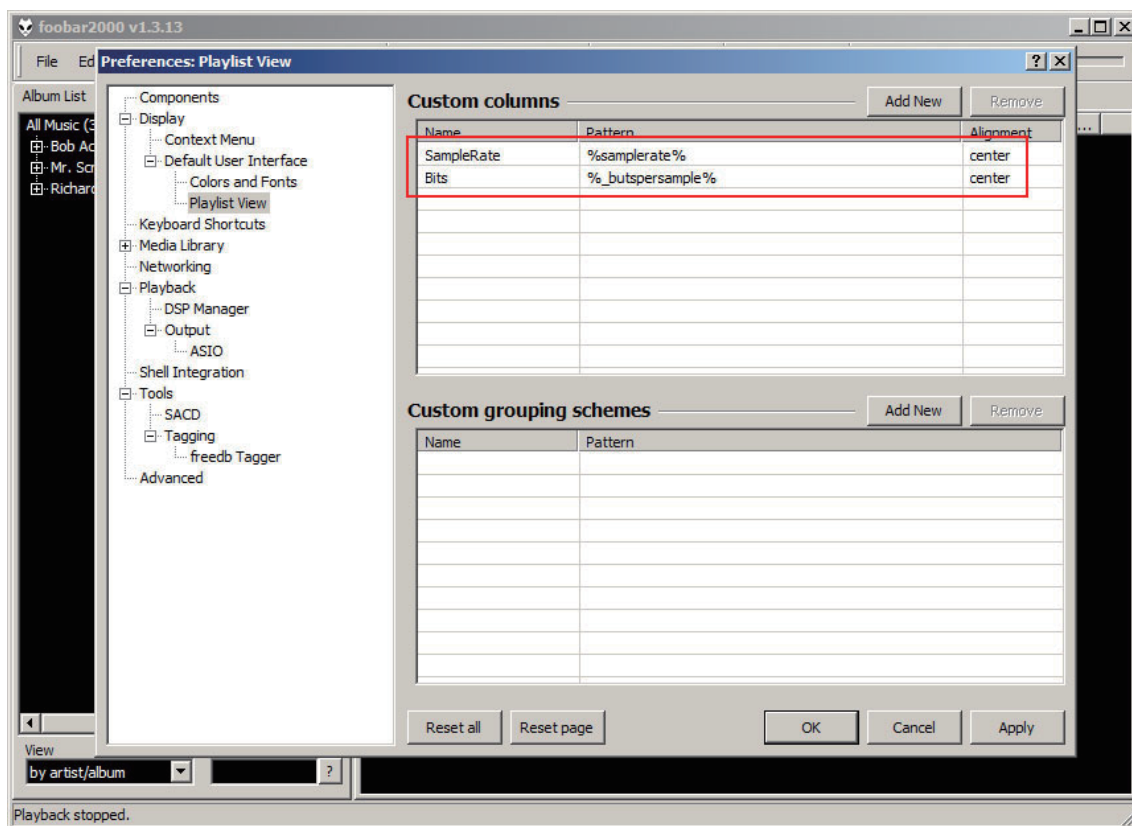


18. Select DSD : ASIO : PureAudio ASIO Driver > Apply > OK

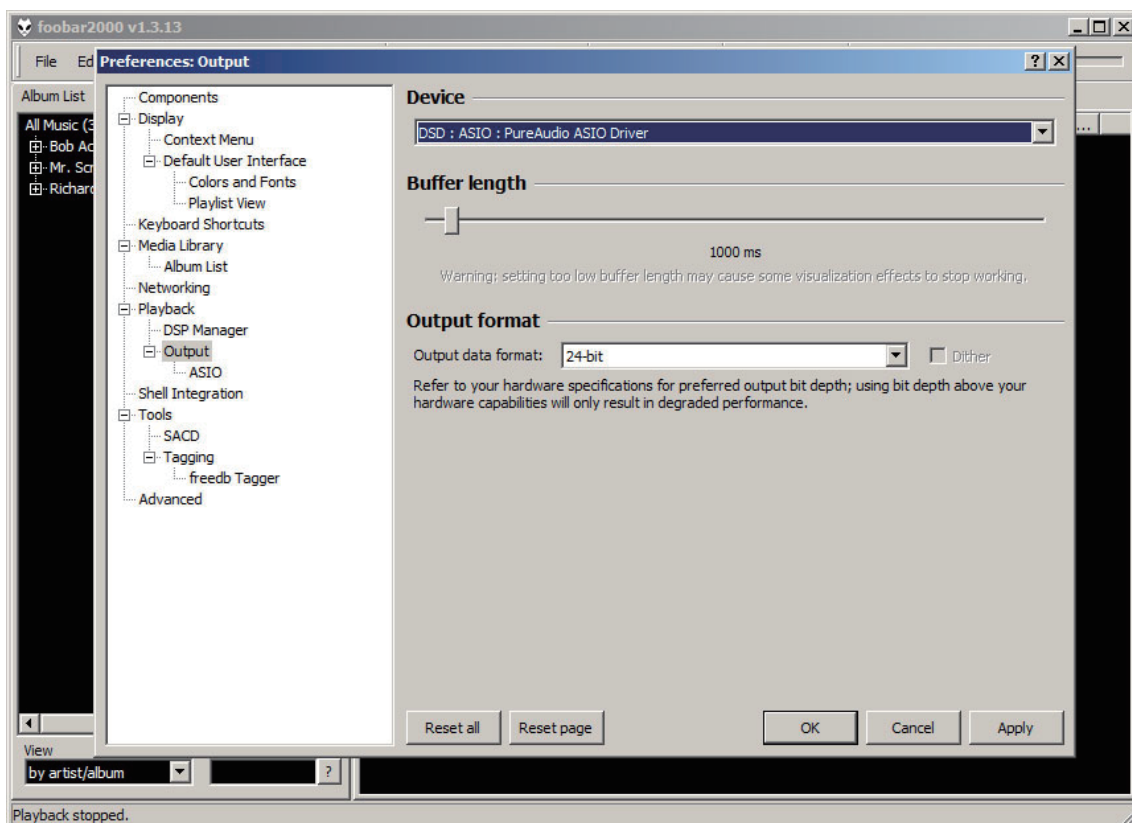


19. Select Output mode > DSD, Select DSD ASIO Device > PureAudio ASIO Driver > Apply > OK

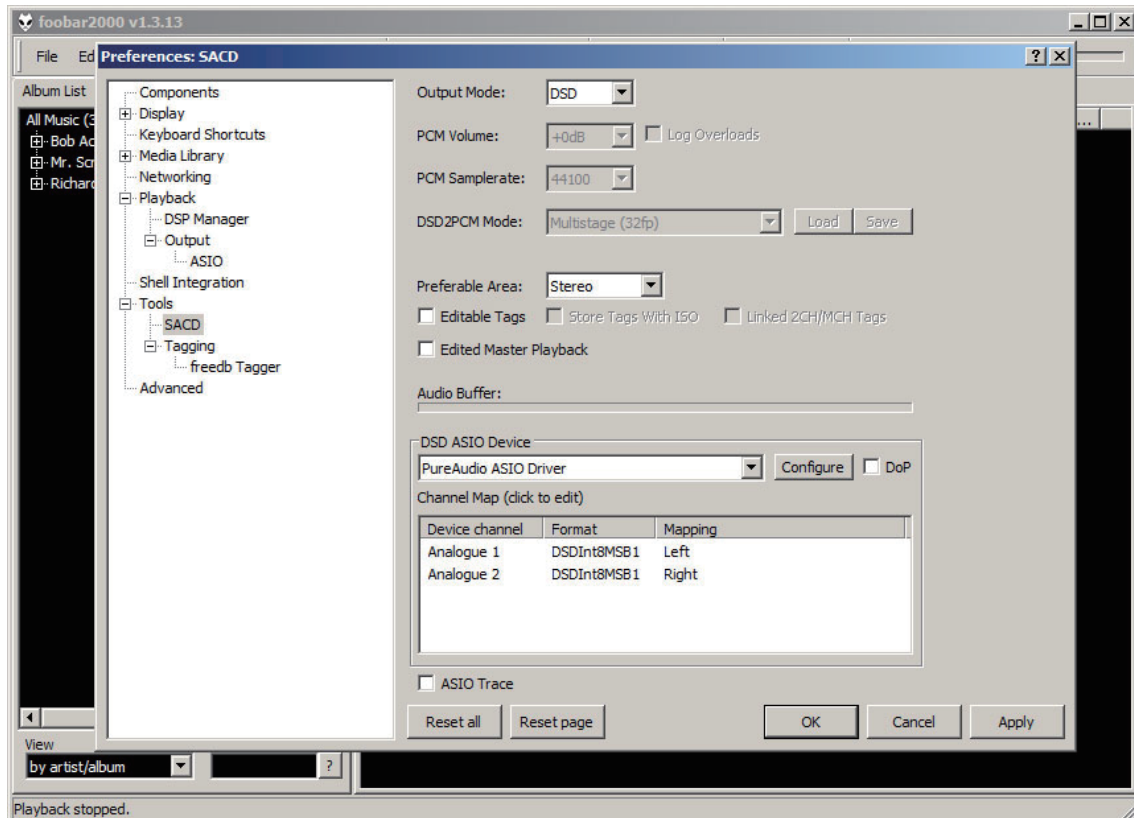

20. Select Playback Device

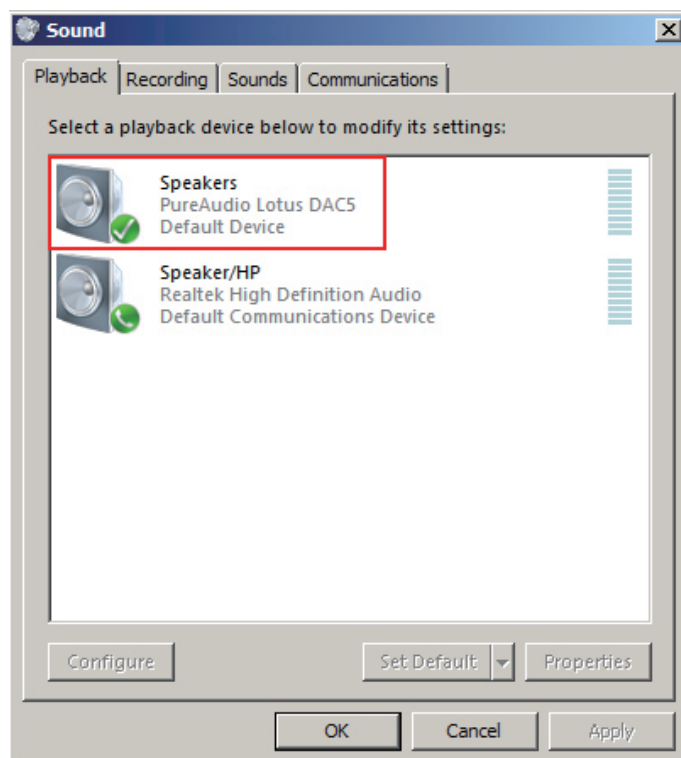

21. Make sure the Enhancements are not selected

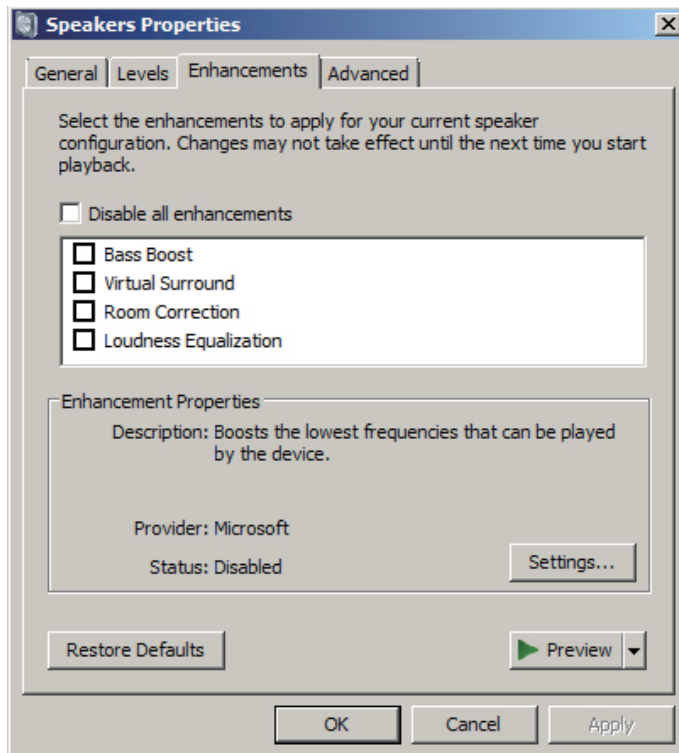

22. Note Sample rate is unimportant for direct exclusive drive

