

PecanPi® USB/SPDIF Instructions



1. Install drivers:
 - a. Windows driver download at [this link](#).
 - b. Linux – No driver needed
 - c. Android – No driver needed
 - d. Mac – No Driver needed
2. Make all audio connections to the device.
 - a. RCA and XLR are both active at the same time
3. Connect USB or S/PDIF
 - a. If both are plugged in, the device will default to S/PDIF
4. Connect power (9V).

PecanPi® USB/SPDIF Volume Control



The device's volume can be controlled in one of two ways:

1. The knob on the front of the unit controls volume.
2. Software control through USB or S/PDIF

If using the knob, either disable the software volume control or set to 100%

If using software volume control turn the knob to a fully clockwise position.