
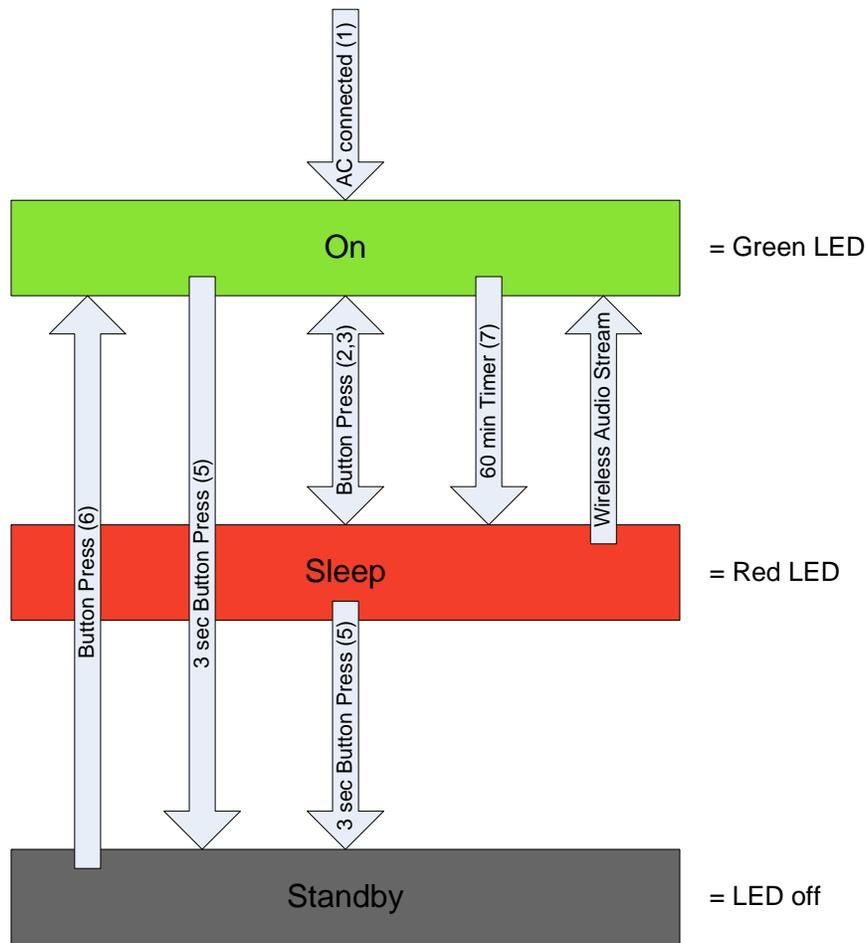







Stadium "On/Stby" Button Operation



Notes:






1. Default (AC connected) is **On**. On/Standby LED is green.
2. From **On** mode, press "On/Stby" button to enter **Sleep** mode.
3. From **Sleep** mode, press "On/Stby" button to enter **On** mode.
4. From **Sleep** mode, start WiFi stream to enter **On** mode.
5. From **On** or **Sleep** mode, press "On/Stby" button for 3 seconds to enter **Standby** mode.
6. From **Standby** mode, press "On/Stby" button to enter **On** mode.
7. From **On** mode, if no music plays for 60 minutes, enter **Sleep** mode.
8. When exiting Sleep or Standby mode, remember last used input.
9. In **On** mode, Power LED = Green, Wireless LED is on, WiFi radio is on.
10. In **Sleep** mode, Power LED = Red, Wireless LED is on, WiFi radio is on, Amplifier is in standby (no hiss).
→ If Bluetooth was the last used Wireless input, then Bluetooth radio is on.
11. In **Standby** mode, Power LED = off, Wireless LED is off, WiFi radio is off, Amplifier is off, main power supply is off.

Stadium "Wireless" Button Operation and Wireless Setup

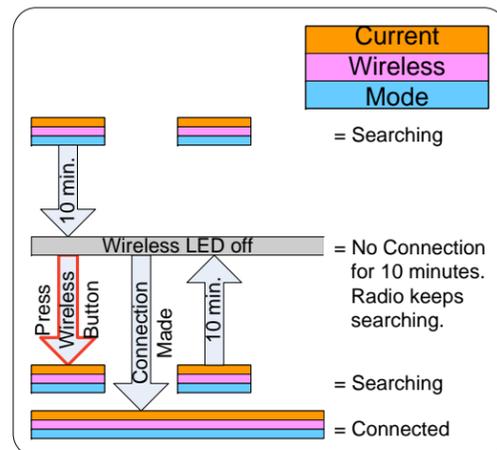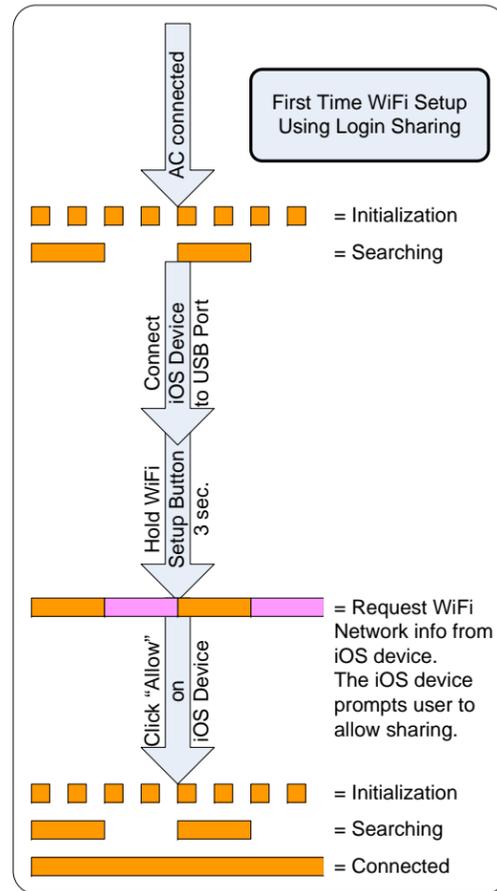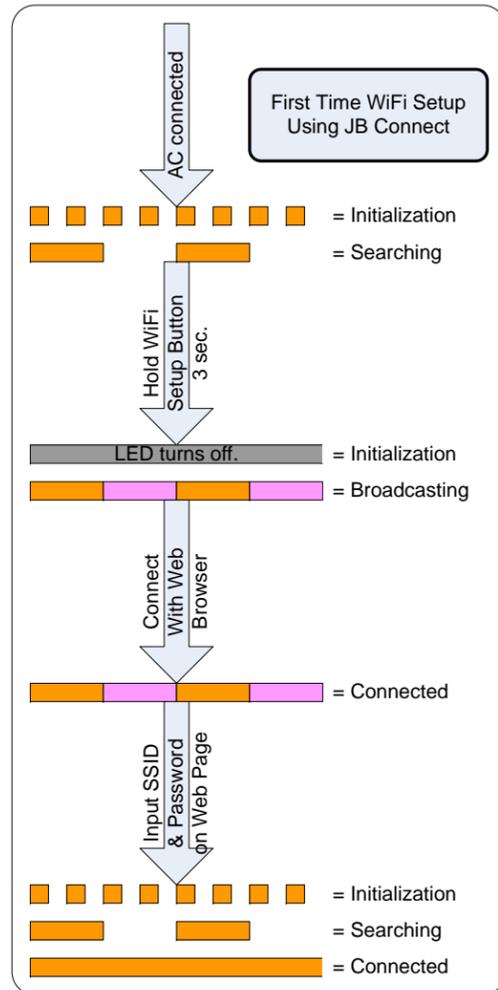
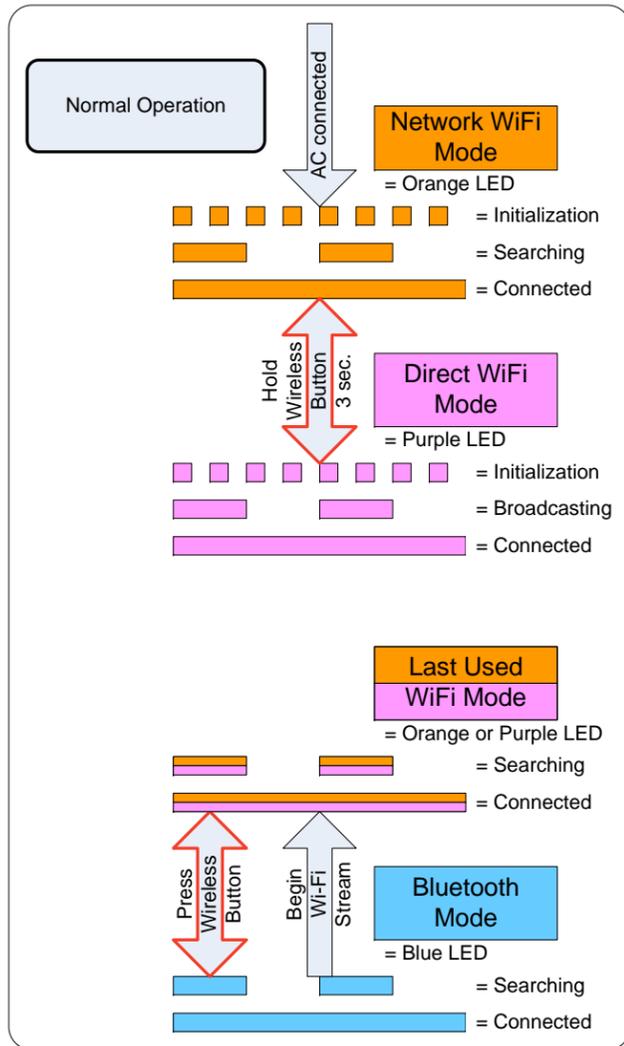



Notes:
 Default (AC connected) is **Wi-Fi Network** mode. Hold "Wireless" button 3 seconds to enter **Wi-Fi Direct** mode. Hold "Wireless" button 3 seconds to return to **Wi-Fi Network** mode. Press "Wireless" button (<3 sec.) to enter **Bluetooth** mode. Press "Wireless" button (<3 sec.) to return to last used **Wi-Fi** mode (**Network** or **Direct**). When exiting sleep or standby mode, remember last used input. If another source is being used and a Wi-Fi/AirPlay stream begins, automatically switch to **Wi-Fi** input, per Apple Spec.
 LED flashes rapidly (4Hz) during **BridgeCo** initialization and during **Bluetooth pairing**.
 LED flashes slowly (1Hz) when searching/waiting for Network Wi-Fi, Direct Wi-Fi, or Bluetooth connection.
 LED is on (no flashing) when connection is made to Network Wi-Fi, Direct Wi-Fi, or a Bluetooth device is connected.
 If no connection is made for 10 minutes, Wireless LED turns OFF.
 LED is ORANGE for **Wi-Fi Network** mode. Bluetooth radio is OFF.
 LED is PURPLE (ORANGE & BLUE) for **Wi-Fi Direct** mode. Bluetooth radio is OFF.
 LED is BLUE for **Bluetooth** mode. Wi-Fi radio remains on, per Apple Spec.

Stadium Factory Reset and Firmware Operations

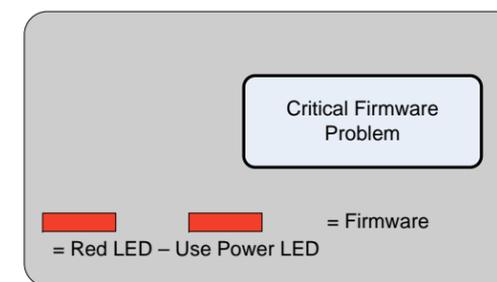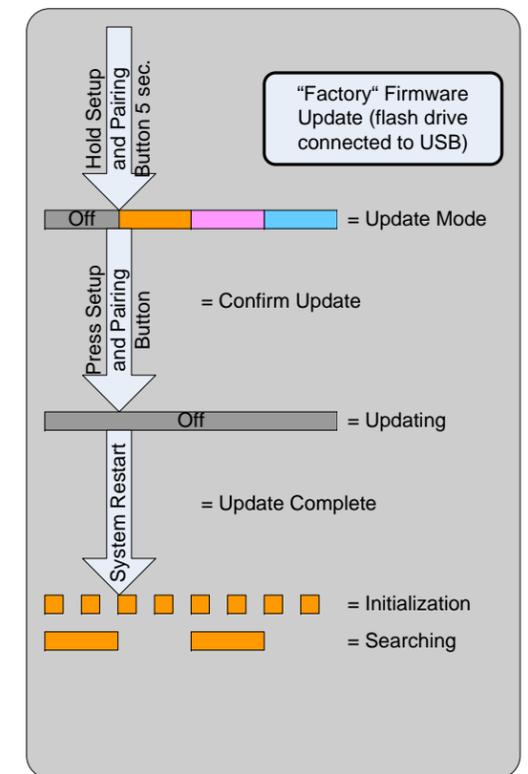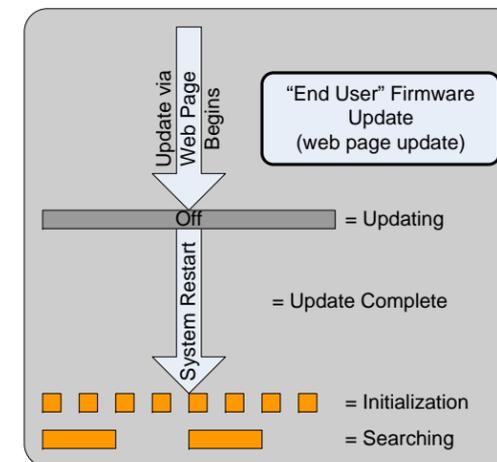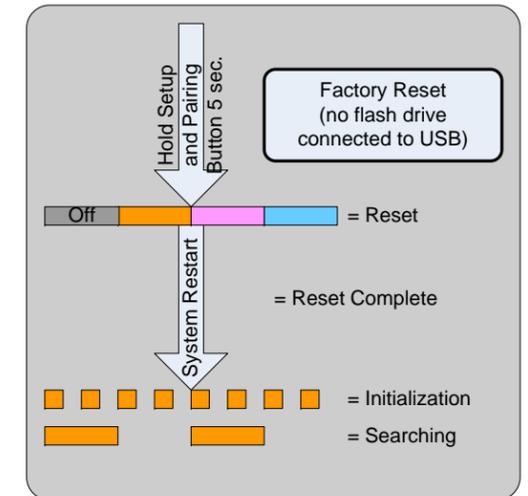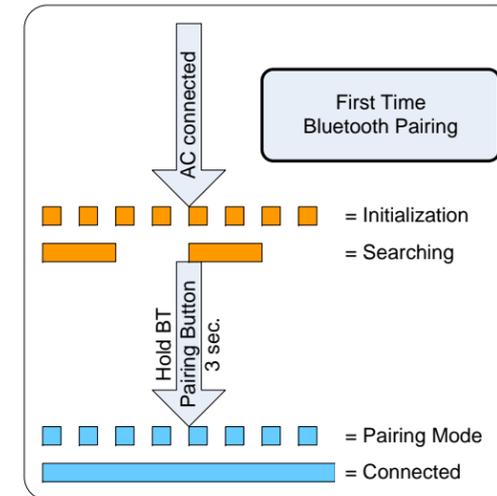

Stadium "Source" Button Operation

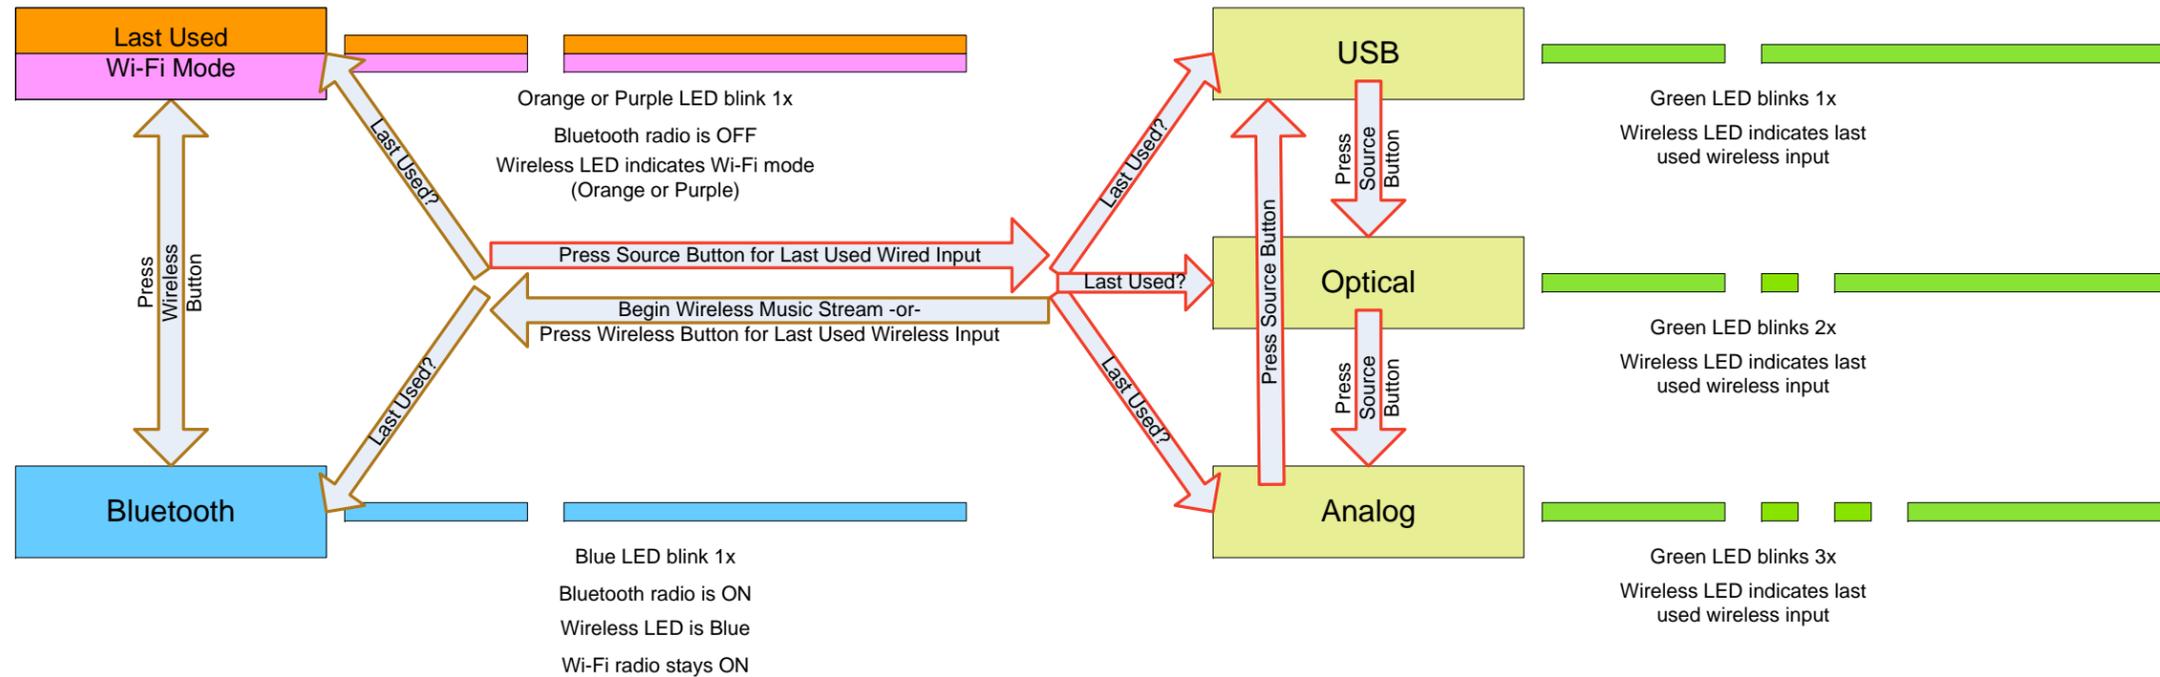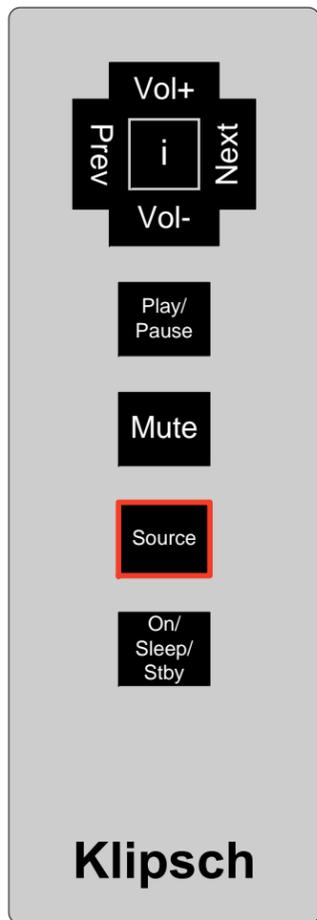

Notes: System remembers last used Wired Source and last used Wireless Source. System will wake from **Sleep** and **Standby** modes to last used input. System will wake from **Sleep** on Wi-Fi/AirPlay stream or Bluetooth stream (only if Bluetooth was the last used wireless input).


Default (AC Connected) is the **Wi-Fi** input. Press "Source" button to enter **USB** mode. Press "Source" button to enter **Optical** mode. Press "Source" button to enter **Analog** mode. Press "Source" button to return to **USB** mode.

From any Wireless Input, press "Source" button to go to last used Wired Input. From any Wired Input, press "Wireless" button to go to last used Wireless Input (or start wireless stream).

Green LED blinks 1 time for **USB** mode.
Green LED blinks 2 times for **Optical** mode.
Green LED blinks 3 times for **Analog** mode.

Wireless LED blinks 1 time for when "Wireless" button is pressed.
Wireless LED shows current/last used wireless connection color.


Stadium Volume Buttons Operation

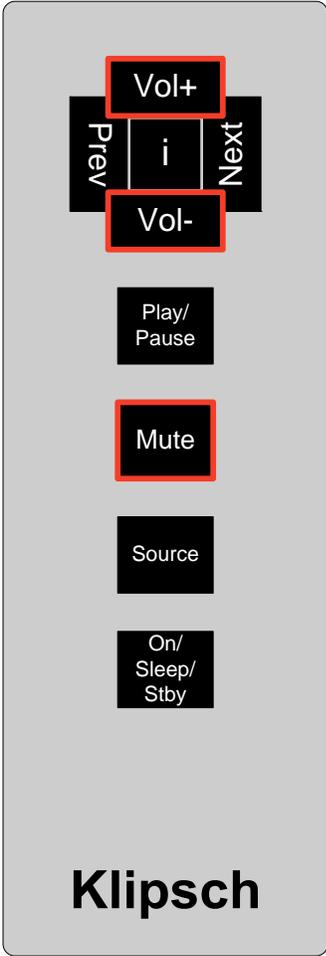


Green Power LED blinks 1x for button press



Green Power LED blinks when button is held

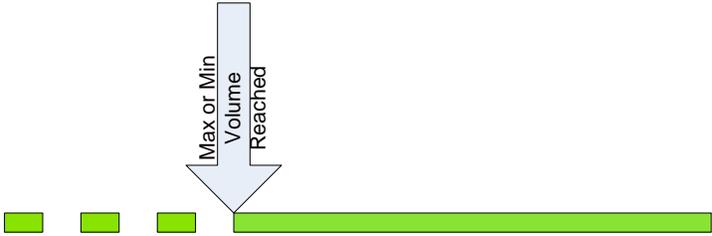


LED stops blinking when max or min volume is reached.



LED Flashes every 4 sec. when muted

<u>Volume Button Function</u>	
Volume Up	Press to increase the volume one step. Hold to increase the volume multiple steps rapidly.
Volume down	Press to decrease the volume one step. Hold to decrease the volume multiple steps rapidly.
Notes:	When holding the volume button, volume changes 5dB per second. LED stops blinking when Max or Min Volume is reached. LED flashes every 4 seconds when Volume is muted.

Stadium Remote Buttons Operation

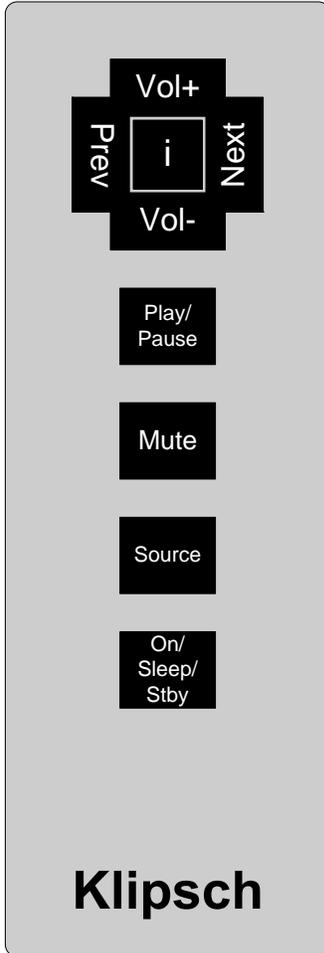

Green Power LED flash 1x for button press



Green Power LED flashes when button is held

<u>Remote Button Function</u>	
On/Off	From Sleep or Standby mode, press to turn On. From On mode, press to enter Sleep mode. From On mode, hold 3 seconds to enter Standby.
Play/Pause	Press to play currently selected track. Press to pause currently selected track.
Mute	Press to mute speaker output.
Source	Press to select last used Wired Source. Press again to select another Wired Input in the following order: USB → Optical → Analog Green LED flashes according to input selected, not according to legend above.
Volume Up	Press to increase the volume one step. Hold to increase the volume multiple steps rapidly.
Volume Down	Press to decrease the volume one step. Hold to decrease the volume multiple steps rapidly.
Next Track	Press to skip to the next track in the play list. Hold to fast forward through the current track.
Previous Track	Press to skip to the previous track in the play list. Hold to fast rewind through the current track.

Notes: Manufacturer prefix for all IR codes is 0x 01FE.

IR Codes:

On/Sleep/Standby	0x 01FE 1CE3	(Press for On/Sleep. Hold for Standby.)
Volume Up	0x 01FE 12ED	(Hold for volume ramp up.)
Volume Down	0x 01FE 0DF2	(Hold for volume ramp down.)
Source	0x 01FE 13EC	(Press to select a Wired Input.)
Play/Pause	0x 01FE 06F9	(Press to toggle between Play and Pause of the current track.)
Next Track	0x 01FE 40BF	(Hold for fast forward.)
Previous Track	0x 01FE 15EA	(Hold for fast rewind.)
Mute	0x 01FE 25DA	(Press to mute the audio.)
Metadata (i)	0x 01FE 28D7	(not used)